



# Laundry Payment

1

## Kies uw machine

Controleer of de machine vrij is en kies dan uw machine via de keuzeknop.

*Check if the machine is available, then choose your machine using the button.*



2

## Scan uw pas

Scan uw bankpas terwijl de te starten machine op het scherm staat.

Ga naar de machine en volg de instructies op de machine.

*Present your bank card while the machine to be started is displayed.*

*Go to the machine and follow the instructions on the machine.*



Wasmachine 1



Wasmachine 2



Droogtrommel A  
40 min



Droogtrommel B  
40 min

