



# WASHING MACHINE

1

Open the door by clicking on the key and put the laundry in the drum, close the door



2




Add the detergent:

- 1 Detergent for main wash
- 2 Fabric softener
- 3 Detergent pre-wash


A Put this flap up if you use powder



Liquid

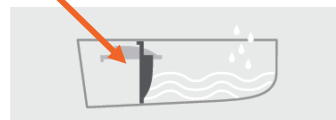

Powder

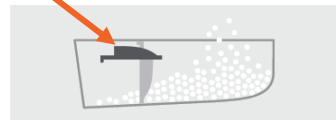

3

Select the desired wash programme (you can scroll forward and backward through the menu)



4

Make the payment and press the START key



5

Open the door by clicking on the key

