 




WASHING MACHINE

1

Open the door and put the laundry in the drum, close the door

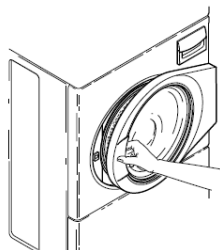

2


Add the detergent:

1 Main wash detergent

2 Liquid bleach


3 Fabric softener

4 Pre-wash detergent

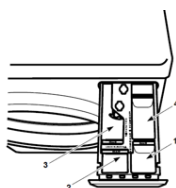

3

Select desired wash programme

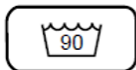

Normal 90



60° (Lower spin speed)



Normal 60



30° (Delicate)



Normal 40



No temperature

4

Choose the desired length of your washing program :

A Main wash only

B Add a prewash

C Add a prewash and extra rinse

5

Close the washer door and press the START button.

