



WASHING MACHINE


1

Open the door and put the laundry in the drum, close the



2

Add the detergent:

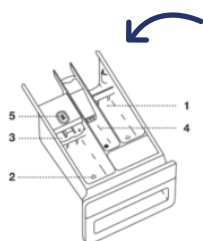

1 Prewash compartment

2 Compartment for main wash liquid detergent

Use the foldable barrier (3)

2 Compartment for main wash powder detergent

Do not use the foldable barrier (3)

4 Softener compartment

5 Tab for detergent compartment removal

3

Select the desired washing program by turning the selection knob in either direction



4

Confirm the washing program by pressing the button below the program



5

Close the door of the washer and press the Start / Pause button

