



Dryer

1

Open the door by clicking on the key and put the laundry in the drum, close the door



2

Load the drum half full



3

Select the desired drying program (you can scroll forward and backward through the menu)



4

Do the payment and press the start key



5

Clean the lint filter after every drying cycle!

