


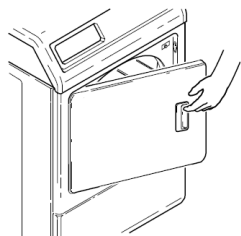

DROOGKAST


1

Open the door and put the laundry in the drum, close the door



2

Load the drum half full

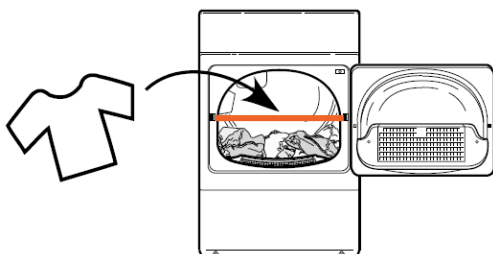

3

Select the desired drying programme



High temperature



Low temperature




Average temperature



Delicate

4

Press the start button to start the dryer

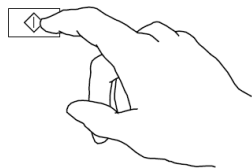

DRV2660N_SVG

5

Clean the lint filter after every drying cycle!

