



DRYER

1

Open the door and insert the laundry



2

Load the drum half full



3

Choose the drying program by rotating the program selector knob in either direction



4

Confirm the program selection by pressing the button under the program



5

Clean the lint filter after every drying cycle!

